

RESETTING SALES RESULTS:

Resetting daily sales results:

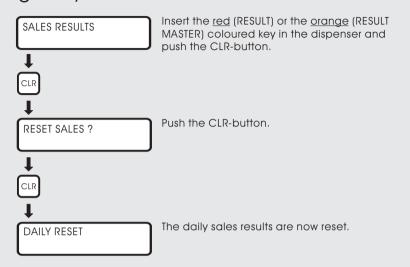

Resetting periodical sales results:

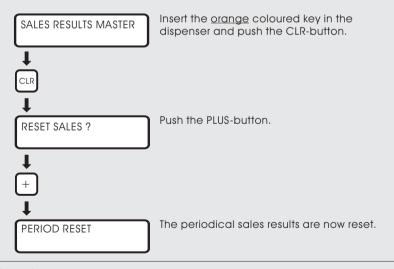

Manufacturer:

WWB DRINK SYSTEM OY Sepänkyläntie 212 65610 MUSTASAARI FINLAND Phone:+358-6-322 3074 Fax:+358-6-322 3076 info@wwbdrinksystem.fi www.wwbdrinksystem.fi







PORTIONING OF BEER:

Sales key (blue):

INSERT KEY

Insert the <u>blue</u> sales key in the keyhole on the dispenser's right hand side.

SALE

Choose product and measure by pushing the button for either a <u>large</u> or a <u>small</u> measure of beer from line one, two or three.

Waiter key (grey):

INSERT KEY Waiter control Insert the <u>grey</u> waiter key in the keyhole on the dispenser's right hand side when the dispenser is programmed for waiter sales.



SALE No. 01 Choose product and measure by pushing the button for either a <u>large</u> or a <u>small</u> measure of the beer from line one, two or three.

FREE FLOW MEASURING:

INSERT KEY

Make sure that the tap is closed before inserting the <u>blue</u> sales key in the keyhole on the right hand side of the dispenser

SALE

Open the tap and pour the beer. Close the tap when the glass is full or the right measure is obtained.

SALE

00012 00017 00015

If the dispenser is programmed for volume measuring for all lines the volume dispensed is shown in the display. The volume unit is the same as for the programmed large measure for each line.

ALARM:

SALE 1 3 EMPTY

If a Sold out Unit/FOB-detector (sold separately) is connected to the dispenser an alarm message is automatically shown on the display when a product is sold out. For example: line 1 and 3 empty.

SALES RESULTS:

Sales key (blue) and Waiter key (grey):

Daily Small Large 12 00001 00023 Insert the <u>blue</u> or the <u>grey (only</u> when programmed for waiter control) sales/waiter key in the dispenser. Push the ENT-button. The dispenser now shows the sales of large and small measures. The word Daily indicates from which line/lines the results are. The example display on the left indicates that line one and two are counted together. Browse through the results from the different lines by pushing the ENT-button.

Sales result keys (red and orange):

Daily Small Large 12 00001 00023 Insert the sales result key in the dispenser and push the ENT-button. The display now shows the daily sales of small and large measures. The word Daily indicates from which line/lines the results are. The example display on the left indicates that line one and two are counted together. Browse through the results from the different lines by pushing the ENT-button.

Period Small Large 12 00001 00023 Insert the sales result key in the dispenser and push the PLUS-button. The display now shows the periodical sales of small and large measures. The word Period indicates from which line/lines the results are. The example display on the left indicates that line one and two are counted together. Browse through the results from the different lines by pushing the ENT-button.

No. 001 Small Large 1 00001 00023 Insert the sales result key in the dispenser and push the MINUS-button. The display now shows each individual waiter's sales results from each beer line. The word No. indicates from which beer line the results are. Browse through the different waiters' results (1-10) and beer lines (1-3) by pushing the ENT-button. The total daily and periodical sales for all waiters are displayed in the same way as for the normal daily and periodical sales (by pushing the ENT/PLUS-button, see above).