



## RESETTING SALES RESULTS:

### Resetting daily sales:

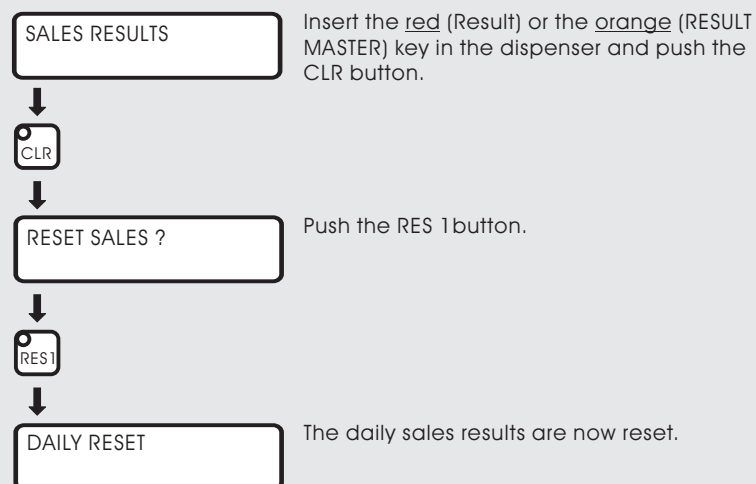

### Resetting periodical sales:

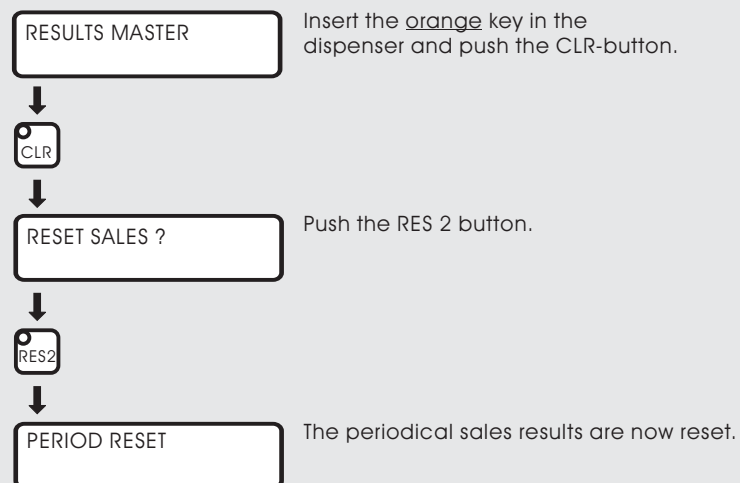


### Manufacturer:

WWB DRINK SYSTEM OY  
Sepänkyläntie  
65610 MUSTASAARI  
FINLAND

Phone. +358-6-3223 074  
Fax. +358-6-3223 076  
info@wwbdrinksystem.fi  
www.wwbdrinksystem.fi

# BCS-61 USER'S MANUAL REV 3.4 E

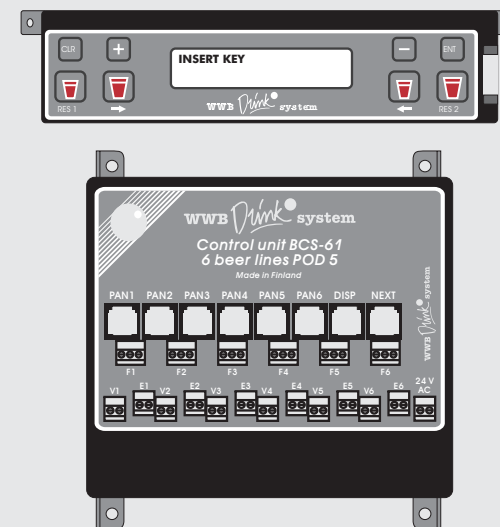

WWB *Drink* system



## PORTIONING OF BEER:

### Sales key (blue):

INSERT KEY

Insert the blue sales key in the keyhole on the dispenser's right hand side.



SALE

Choose product and measure by pushing the button for either a large or a small measure of beer from line one, two or three.

### Waiter key (grey):

INSERT KEY  
Waiter control

Insert the grey waiter key in the keyhole on the dispenser's right hand side when the dispenser is programmed for waiter sales.



SALE  
No. 01

Choose product and measure by pushing the button for either a large or a small measure of the beer from line one, two or three.

## FREE FLOW MEASURING:

INSERT KEY

Make sure that the tap is closed before inserting the blue sales key in the keyhole on the right hand side of the dispenser

SALE

Open the tap and pour the beer. Close the tap when the glass is full or the right measure is obtained.

## ALARM:

SALE    E1 ON   E2 ON

If a Sold out Unit/FOB-detector (sold separately) is connected to the dispenser an alarm message is automatically shown on the display when a product is sold out. For example: line 1 and 3 empty.

## SALES RESULTS:

### Sales key (blue) and Waiter key (grey):

Daily	Small	Large
12	00001	00023

Insert the blue or the grey (only when programmed for waiter control) sales/waiter key in the dispenser. Push the ENT-button. The dispenser now shows the sales of large and small measures. The word Daily indicates from which line/lines the results are. The example display on the left indicates that line one and two are counted together. Browse through the results from the different lines by pushing the ENT-button.

### Results key red / orange:

DAILY	Small	Large
12	00001	00023

Insert the results key in the dispenser. Push the RES 1 button. The display now shows the daily sales of small and large measures. The word Daily indicates from which line/lines the results are. The example display on the left indicates that line one and two are counted together. Browse through the results from the different lines by pushing the RES 1 button again.



DAILY	Medium	
12	00001	

Use the Minus button to show the sales of the Medium portions.

To read out the periodically sales use RES 2 button instead of the RES 1 button .

No 001	Small	Large
12	00001	00023

Insert the results key in the dispenser. Push the PLUS -button to read the results from the different waiters. Browse through the waiter numbers with the PLUS- button and press ENT when the requested waiter number is in the display.

